

## Viewing the System Log with an LCD Remote Keypad - 9

To view the log with an LCD remote keypad, proceed as follows;

1. Ensure that "User menu 2" is selected. Press **9** to select the **View Log** option. The display shows the most recent event. The top line shows the event description (see Table 1), and the bottom line shows the time and the date that the event occurred on e.g.:

LCD

|                |
|----------------|
| PASSCODE 01    |
| 08:45.59 28/04 |

2. Use the **A** or **ENT** keys to scroll backwards and the **C** key to scroll forwards through the log, e.g., enter "A" to scroll backwards. The display shows the previous event e.g.:

|                |
|----------------|
| PASSCODE 01    |
| 08:40.59 28/04 |

3. If the event being displayed is one that refers to a user number, e.g., "PASSCODE 01". Pressing the **B** key will toggle between the user text (name) and user number for that event.

|                |
|----------------|
| PASSCODE Colin |
| 08:40.59 28/04 |

|                |
|----------------|
| PASSCODE 01    |
| 08:40.59 28/04 |

4. If the event being displayed is one that refers to a circuit number, e.g., "ALARM 02". Pressing the **B** key will toggle between the circuit number and circuit text for that event.

|                |
|----------------|
| ALARM 02       |
| 06:00.59 28/04 |

|                |
|----------------|
| Store Room PIR |
| 06:00.59 28/04 |

5. Press **ESC** to leave this option and return to "User menu 2".